

# TS-30-KSL/長柄選擇開關



作動模式



Selector Head  
2positions 0-I or I-II  
switching angle 90°  
do.but illuminated version

ON-OFF  
ON-ON  
2 段選擇



TS-30-KSL-1RR



TS-30-KSL-1YY



TS-30-KSL-1BLBL



TS-30-KSL-1GG



TS-30-KSL-1WW



TS-30-KSL-1BK



TS-30-KSL-2RR



TS-30-KSL-2YY



TS-30-KSL-2BLBL



TS-30-KSL-2GG



TS-30-KSL-2WW



TS-30-KSL-2BK

ON-OFF-ON  
3 段選擇

Selector Head

3positions I-0-II or 0-I-II  
switching angle 45° + 45°  
do.but illuminated version

作動模式



作動模式



Selector Head(spring reset)  
switching position on the left.  
with spring reset to 0-position  
from the right.I-0-II  
switching angle 45° + 45°  
do.but illuminated version

ON-OFF-ON  
3 段單邊彈回



TS-30-KSL-3RR



TS-30-KSL-3YY



TS-30-KSL-3BLBL



TS-30-KSL-3GG



TS-30-KSL-3WW



TS-30-KSL-1BK



TS-30-KSL-4RR



TS-30-KSL-4YY



TS-30-KSL-4BLBL



TS-30-KSL-4GG



TS-30-KSL-4WW




TS-30-KSL-2BK

ON-OFF  
ON-ON  
2 段單邊彈回

Selector Head(spring reset)  
with spring reset to 0-position  
(on the left).0-I  
switching angle 90°  
do.but illuminated version

作動模式

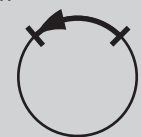

作動模式



Selector Head(spring reset)  
with spring reset to the middle  
position I→0←II  
switching angle 45° + 45°  
do.but illuminated version

ON-OFF-ON  
3 段雙邊彈回



TS-30-KSL-5RR



TS-30-KSL-5YY



TS-30-KSL-5BLBL



TS-30-KSL-5GG



TS-30-KSL-5WW



TS-30-KSL-1BK